


Technoflies, Maxiflies, Multiflies & Superflies Tile Cutting Machines



CUTTING

Place the tile and adjust the angle in the required position. Scribe the tile consistently.

A professional tip: To cut tile, scribe only once. Repeated scribing ruins your cutting wheel and the tile.

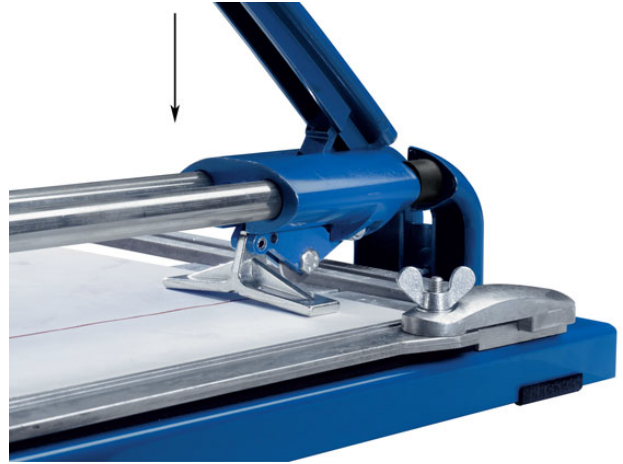

BREAKING

Place the breaker always in the front and break the tile with an adequate pressure on the handle.

If you don't succeed in the first run, check if the glaze has been scribed well and continuous. Not correctly scribed tiles are impossible to break or the breakage doesn't follow along the scribed line.



ADJUSTING

Profit of the adjustable stop angle (with scale in millimetre and inch) to adjust the required measurement.

For diagonal cuts place the tile in the notch at the stop. With the Maxiflies and Superflies the tiles can be adjusted for 45 ° also with the aid of the angle.

MAINTENANCE

Before the first usage clean the guide bars with a dry cloth to remove the oil film.

If you don't use the tile cutting machine for any length of time, we recommend to re-oil the guide bars to prevent them from corrosion.

Please check regularly the true running of the tungsten carbide cutting wheel. In case of abrasion change the tungsten carbide cutting wheel and the spindle. The tungsten carbide cutting wheel, the spindle as well as every single part are available as original Kaufmann replacement parts and guarantee an optimal functionality.

We wish you success and fun for your work. Please contact us if you have any questions.